工場出荷時 Android のバージョン
10
10
10
10
10

EloViewについて

EloViewとは弊社の親会社であるElo Touch Solutionsが、行っている MDMのことを示しています。

https://www.elotouch.com/eloview

Android10版 PC で、弊社 MDM(Eloview)登録で使用される場合は ユーザーガイド UM600582 を参照ください。

備考)GMS は Google Mobile Service の略です。

Copyright © 2022 Elo Touch Solutions, Inc. All Rights Reserved. (不許複製·禁無断転載)

本書のいかなる部分も、Elo Touch Solutions, Inc. の書面による事前の許可なく、いかなる形式・手段 (電子的、磁気的、光学的、化学的、手動的、その他の手段を含む) によっても、複製、送信、複写、検索システムへの記録、またはいかなる言語あるいはコンピューター言語への変換も行うことはできません。

免責事項

本書の内容は、将来予告なく変更されることがあります。 Elo Touch Solutions, Inc. およびその関係会社 (「Elo」と総称します)は、本書の内容に関して何らの表明も保証もいたしません。特に、本製品の商品性お よび特定目的への適合性について、いかなる暗示的保証もいたしません。Elo は、他者に対する事前通知の 義務を負うことなく、適宜、本書の内容を改定・変更する権利を有しています。

商標について

Elo (ロゴ)、Elo Touch Solutions、IntelliTouch、iTouch 、EloViewは、Elo およびその関連会社の登録商標で す。Windows は、Microsoft Corporation の商標です。

EloViewについて

EloViewとは弊社の親会社であるElo Touch Solutionsが、行っているMDMのことを示しています。

https://www.elotouch.com/eloview

タッチパネル・システムズ サポートセンター 電話番号:03-5464-5835、FAX番号:03-5464-5478 e-mail:<u>tpstech@tps-support.com</u>

受付時間:月曜日~金曜日(但し、弊社指定休日は除く) 9:00~12:00、13:00~17:00

注意事項)本体表示内容は、アップデートされ、本説明書と異なる場合があります。

目 次

1.	デバイスの初期設定(デバイス操作)	. 4
2.	ナビゲーションバーを隠す手順/再度表示する手順	. 9
3.	Android Home モードでアプリをインストールする手順	20

1. デバイスの初期設定(デバイス操作)

1.1 GMS 登録(Enroll with GMS)モードでのセットアップ

「Choose Set Up Method」 メニューで、「Enroll with GMS」を選択します。

GMS wizard に従って、google account 作成, Android Passcode 設定, データコピーなどを行って下さい。

注意)デバイスは Eloview によりコントロールできません。Eloview で管理に変更する場合は「Factory reset to EloView」で

リセットする必要があります。



但し、OS バージョンによっては、モード選択後に、以下のような確認画面が表示される場合がありますので、 「OK」を選択して下さい。 1.2Android ホームモードでのセットアップ(オフライン可)

「Choose Set Up Method」 メニューで、「Android Home Mode」を選択すると、デバイスは Android ホームモード で起動します。

注意)デバイスは Eloview によりコントロールできません。Eloview で管理に変更する場合は「Factory reset to EloView」で

リセットする必要があります。



但し、OS バージョンによっては、モード選択後に、以下のような確認画面が表示される場合がありますので、 「OK」を選択して下さい。

Confirmation Dialog	
Are you sure you want to pro to Android Home Mode?	ceed
Cancel	Ok

1.3 別モードでセットアップを再度行うための手順

以下の手順によりリセットすることで、再度セットアップすることが可能です。 データ,設定は、全て初期化されます。必要なデータがある場合は、USBメモリ等を使用してバックアップしてくだ さい。

1.3.1	[Android Home]	モード及び	[Enroll with GMS]	モードから	リセットする手	・順(Eloview モー	- ドへの再設定
などのナ	こめ)						

「
Setting」ギアアイコンをタップし、表示されるメニューから「システム(system)」->「詳細設定(Advanced)」
->「リセットオプション(Reset options)」->「すべてのデータ消去(Erase all data)(factory reset to EloView Mode)」
を選択すると、「Erase all data」と 2 回、聞いてきますので、そのまま選択しリセットしてください。

~	-	Reset options
		Reset Wi-Fi, mobile & Bluetooth
		Reset app preferences
		Erase all data (factory reset)
		Erase all data (factory reset to EloView Mode)

1.3.2 Eloview モードからリセットする手順

- 1) まずは、Eloview でデバイスの削除を実施してください。(UM600582 の 7.2 項参照)
- a) オンラインの状態で、右上の「Devices」をクリックして、以下のように EloView の登録から削除するデバイ スが表示されることを確認し、削除するデバイスの右に表示されているゴミ箱アイコンをクリックします。

F	In	VIFW				Dealtheard	Devices	Dev 2	Your t Zone Abou	trial ends in 40 day(s) Subscrib tt Support	v Now
		VILVV				Dasnboard	Devices	Content	Schedule	ACTIVITY ACCOU	Ints Y
	Devi	ces (1) ~							E Device Groups	•
	Cont	entsrc	Contentstatu	is Devicemod	de Filestati	us Orientati	on Status			Mini IDS(0)	+
	□ Dr □ Sc	nd chedule	☐ Failed ☐ Pending ☐ Success	☐ 1.0-stan ☐ Connec ☐ Control ☐ Core	ndard 🗌 Faileo t 🗌 Progr 🗌 Succi	d 🗌 Lands essing 🗌 Portra ess	cape 🗌 Locked it 🗍 Offline 🗌 Online 🗌 Unregis	stered		PayPoint Android(0)	+
	0	Searc <mark>h d</mark>	evices			3	Filter - Sav	ve Filter 👻 🌼	B	T Filters	
								Add Device	•		
		Na	me Gr	Sei Dup Nu	rial Site mber Add	Site ress Name	Software Version	Timezone	Act		
	0 📮	es	/10i NA	A19	939 Shin	-Y TPS	3.48.139	GMT+09	Û		

b) デバイス削除の確認メッセージが表示されるので、「Delete」ボタンをクリックすると登録から削除され ます。

Delete Device	×
Are you sure you want to delete the '	
	Delete Cancel

c) デバイスの削除処理が終了すると、削除したデバイスがリストの表示から消えます。 注意)デバイスがオフラインの状態でデバイスの削除を行った場合は、データの削除は行われません。

- 次に、デバイスで、"Elo Home"画面を表示させ、右上コーナーをタップして、"Quick Settings"メニューにアクセスし、
 "Android Settings"でリセットします。
 - a) 電源ボタンとホームボタンを同時に押して、下記のロック画面を表示させます。

備考) 機種により、ボタン位置などが異なるために、各デバイスのユーザーガイドを参照して下さい。

b) 画面をタップし、"Control Panel Password"を入力すると右図のような Elo Home 画面が表示されます。



c) 画面右上をタップし、以下のような"Quick Settings"画面が表示されます。



d) 「Admin」をタップして、Admin password を入力して、グレーアウトしていた「Settings」を有効にし、選択 します。



注意) Admin password は Eloview の Settings の以下で確認できます。

設定されていない場合、デフォルトとして「1elo」が設定されています。

*****	٩
Lockscreen Passcode	
••••	٩
Old Lockscreen Passcode	
••••	٩
Access Restriction Password	
Disabled Enabled	
Admin Password	

d) "Android Settings"を選択し、「System」->「Advanced」->「Reset options」->「Erase all data(factory reset)」 を 選択し、「Erase all data」を2回押して、リセットして下さい。

- 2. ナビゲーションバーを隠す手順/再度表示する手順
- 2.1 ナビゲーションバーを隠す方法1(初期設定後)

備考)途中で、下記以外の問い合わせがある場合があります。

1) Android Home 画面から、「EloViewHomeSDKTestApp」を起動します。

	Monday, Aug 22	
	Elo Perip Elo	Perip
60	Files Settings EloViewH a	ctory T
Google		Play Store
M		*
G	•	

2)	ELOVIEW HOME SDK MAIN MENU 画面から	「SYSTEM」	をタップし	、ます。
2:26	🖬 🏟 🧐			$\leftrightarrow \heartsuit$
			SDK Version: 5	.10.29
	ELOVIEW HOME SD	ĸ		
	MAIN MENU			
	OTA			
	PACKAGE			
	NETWORK			
	SYSTEM			
	MEMORY			
	INFO			
	PERIPHERALS			
	EXIT APPLICATION			

ACI	COUNT MANAGER
CAP	TURE SCREENSHOT
	ET ORIENTATION
GI	ET ORIENTATION
F	ACTORY RESET
S	SILENT REBOOT
SIL	ENT SHUTDOWN
SET R	ESERVED LOG SPACE
GET R	ESERVED LOG SPACE
ENA	BLE HOME BUTTON
DISA	BLE HOME BUTTON
ENA	BLE TOUCH SOUND
DISA	BLE TOUCH SOUND
ENAE	BLE POWER BUTTON
DISA	BLE POWER BUTTON
NETWO	DRK CONFIGURATION
CLEAR API	P CACHE AND USERDATA
CLEAR ALL A	PP CACHE AND USERDATA
SILENT S	ET DEFAULT LAUNCHER
SET NAVIGATION BAR	
SET STATUS BAR	
SET STATUS BAD VISIBLE	

- 4) 「LOAD AND VERIFY TOKEN」をタップし、 ◆ あるいは「MAIN MENU」をタップし、「SYSTEM API」画面 で 「ACCOUNT MANAGER」が緑色表示されていることを確認します。
 - 備考) 左下の OUTPUT の下に 「TOKEN VERIFIED」が表示される場合があります。

		•• ∨
	ACCOUNT MANAGER API	
	Enter email Id	
	Enter Password	
	GET TOKEN VERIFY TOKEN	
	OR	
	Enter Client Id	
	Enter Secret Key	
	GET AND VERIFY TOKEN	
	OR Load a file containing the credentials and verify	
	LOAD AND VERIFY TOKEN	
Output : TOKEN VERIFIED		
EXIT APPLICATION	CLEAR OUTPUT	MAIN MENU
2:28 🖪 🌣 오 🦙		$\leftrightarrow \bigtriangledown$
	SYSTEM API	
	ACCOUNT MANAGER	
	ACCOUNT MANAGER CAPTURE SCREENSHOT	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION FACTORY RESET	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION FACTORY RESET SILENT REBOOT	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION FACTORY RESET SILENT REBOOT SILENT SHUTDOWN	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION FACTORY RESET SILENT REBOOT SILENT SHUTDOWN SET RESERVED LOG SPACE	
	ACCOUNT MANAGER CAPTURE SCREENSHOT SET ORIENTATION GET ORIENTATION FACTORY RESET SILENT REBOOT SILENT SHUTDOWN SET RESERVED LOG SPACE GET RESERVED LOG SPACE	

5) SYSTEM API 画面を下に、「SET NAVIGATION BAR」が見えるまで、スクロールし、右下の「Disable」を選択後、 「SET NAVIGATION BAR」をタップします。

SYSTEM API DISABLE HOME BUTTON ENABLE TOUCH SOUND ENABLE TOUCH SOUND ENABLE POWER BUTTON ENABLE POWER BUTTON IDISABLE POWER BUTTON CLEAR APP CACHE AND USERDATA CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR SE				0.8	
DISABLE HOME BUTTON ENABLE TOUCH SOUND DISABLE TOUCH SOUND DISABLE TOUCH SOUND ENABLE POWER BUTTON DISABLE POWER BUTTON NETWORK CONFIGURATION CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR SET STATUS BAR SET STATUS BAR ISIBLE GRANT AUTO ALL APP PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR GET STATUS BAR ISIBLE SET NAVIGATION BAR GET STATUS BAR ISIS ON SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET SCREEN WAKE-UP		SYST	ΕΜΑΡΙ		
ENABLE TOUCH SOUND DISABLE TOUCH SOUND ENABLE POWER BUTTON IDISABLE BACKLIGHT TIMER IDISABLE POWER BUTTON IDISABLE POWER BUTTON IDISABLE SET SCREEN WAKE-UP IDISABLE BACKLIGHT TIMER IDISABLE BACKLIGHT TIMER IDISABLE BACKLIGHT TIMER IDISABLE SET SCREEN WAKE-UP IDISABLE SET SCREEN WAKE-UP IDISABLE IDISABLE SET SCREEN WAKE-UP IDISABLE IDISABLE IDISABLE IDISABLE IDISABLE IDISABL	DISABLE HOME BUTTON				
DISABLE TOUCH SOUND ENABLE POWER BUTTON DISABLE POWER BUTTON NETWORK CONFIGURATION CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR GRANT AUTO ALL APP PERMISSIONS GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR SET STATUS BAR SE	ENABLE TOUCH SOUND				
ENABLE POWER BUTTON DISABLE POWER BUTTON DISABLE POWER BUTTON CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR GET STATUS BAR SET SCREEN WAKE-UP SET SCREEN WAKE-UP		DISABLE TO	OUCH SOUND		
DISABLE POWER BUTTON NETWORK CONFIGURATION CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR SET STATUS BAR SET STATUS BAR SET STATUS BAR SET STATUS BAR GRANT AUTO ALL APP PERMISSION GRANT AUTO USB PERMISSION GRANT AUTO USB PERMISSION GRANT AUTO USB PERMISSION GET NAVIGATION BAR GET STATUS BAR SET STATUS BAR GET STATUS BAR SET STATUS BAR SET STATUS BAR SET SCREEN WAKE-UP GET BACKLIGHT TIMER		ENABLE PO	WER BUTTON		
NETWORK CONFIGURATION CLEAR APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA CLEAR ALL APP CACHE AND USERDATA SET STATUS BAR SET STATUS BAR SET STATUS BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO ALL APP PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET STATUS BAR SET SCREEN WAKE-UP CET BACKLIGHT TIMER SET TIMEZONE		DISABLE PO	WER BUTTON		
CLEAR ALL APP CACHE AND USERDATA SILENT SET DEFAULT LAUNCHER SET NAVIGATION BAR SET STATUS BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO ALL APP PERMISSION GRANT AUTO USB PERMISSION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE		NETWORK CO	NFIGURATION		
CLEAR ALL APP CACHE AND USERDATA SILENT SET DEFAULT LAUNCHER SET NAVIGATION BAR SET STATUS BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO ALL APP PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR SET BACKLIGHT TIMER SET SCREEN WAKE-UP SET TIMEZONE		CLEAR APP CACH	IE AND USERDATA		
SET NAVIGATION BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO ALL APP PERMISSION GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET STATUS BAR SET BACKLIGHT TIMER SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE		CLEAR ALL APP CA	CHE AND USERDATA		
SET NAVIGATION BAR SET STATUS BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET STATUS BAR GET STATUS BAR SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE		SILENT SET DEF	AULT LAUNCHER		
SET STATUS BAR SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET GRANT AUTO ALL APP PERMISSION SET BACKLIGHT TIMER Never SET SCREEN WAKE-UP CGET BACKLIGHT TIMER	SET NAVIG	ATION BAR			
SET STATUS BAR VISIBLE GRANT AUTO ALL APP PERMISSIONS GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET GRANT AUTO ALL APP PERMISSION GET GRANT AUTO ALL APP PERMISSION GET GRANT AUTO USB PERMISSION SET BACKLIGHT TIMER SET SCREEN WAKE-UP SET SICHE VAKE-UP SET TIMEZONE	SET STA	TUS BAR			
GRANT AUTO ALL APP PERMISSIONS GRANT AUTO USB PERMISSION GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET STATUS BAR GET GRANT AUTO ALL AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET BACKLIGHT TIMER Never SET SCREEN WAKE-UP SET TIMEZONE	SET STATUS	BAR VISIBLE			
GRANT AUTO USB PERMISSION ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET NAVIGATION BAR GET STATUS BAR SET BACKLIGHT TIMER Never SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE	GRANT AUTO ALL	APP PERMISSIONS	○ Enable	Disable	
ENABLE SHARE TEXT SELECTION AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET GRANT AUTO ALL APP PERMISSION GET GRANT AUTO USB PERMISSION SET BACKLIGHT TIMER Never SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE	GRANT AUTO U	SB PERMISSION			
AUTOMATIC IDLE MODE GET NAVIGATION BAR GET STATUS BAR GET GRANT AUTO ALL APP PERMISSION GET BACKLIGHT TIMER GET BACKLIGHT TIMER SET TIMEZONE	ENABLE SHARE	TEXT SELECTION			
GET NAVIGATION BAR GET STATUS BAR GET GRANT AUTO ALL GET GRANT AUTO USB SET BACKLIGHT TIMER Never SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE 	AUTOMATIC	CIDLE MODE			
SET BACKLIGHT TIMER Never	GET NAVIGATION BAR	GET STATUS BAR	GET GRANT AUTO ALL APP PERMISSION	GET GRANT AUTO USB PERMISSION	
SET SCREEN WAKE-UP GET BACKLIGHT TIMER SET TIMEZONE	SET BACKL	IGHT TIMER	Never		
GET BACKLIGHT TIMER SET TIMEZONE		SET SCREE	N WAKE-UP		
SET TIMEZONE		GET BACKL	IGHT TIMER		
		SET TI	MEZONE		

ŝ

6) 画面下のナビゲーションバーが消えたことを確認し、一番下までスクロールして、「EXIT APPLICATION」をタップして終了です。
 2:29 ■ Φ ♥ マ

SYSTEM API						
DISABLE HOME BUTTON						
	ENABLE TO	UCH SOUND				
	DISABLE TO	UCH SOUND				
	ENABLE PO	NER BUTTON				
	DISABLE PO	WER BUTTON				
	NETWORK CO	NFIGURATION				
	CLEAR APP CACH	IE AND USERDATA				
	CLEAR ALL APP CA	CHE AND USERDATA				
	SILENT SET DEF	AULT LAUNCHER				
SET NAVIGA	TION BAR					
SET STAT	US BAR					
SET STATUS B	AR VISIBLE		○ Enable ● Disable			
GRANT AUTO ALL A	PP PERMISSIONS	○ Enable				
GRANT AUTO US	B PERMISSION					
ENABLE SHARE TE	XT SELECTION					
AUTOMATIC I	DLE MODE					
GET NAVIGATION BAR	GET STATUS BAR	GET GRANT AUTO ALL APP PERMISSION	GET GRANT AUTO USB PERMISSION			
SET BACKLIG	HT TIMER	Never	Ŧ			
	SET SCREE	N WAKE-UP				
	GET BACKL	IGHT TIMER				
	SET TIM	MEZONE				

::29 🖪 🌣 오 🖘			$\leftrightarrow \heartsuit$
	SYSTE	ΕΜΑΡΙ	
ENABLE SHARE T	EXT SELECTION		
AUTOMATIC	IDLE MODE		
GET NAVIGATION BAR	GET STATUS BAR	GET GRANT AUTO ALL APP PERMISSION	GET GRANT AUTO USB PERMISSION
SET BACKLI	GHT TIMER	Never	•
	SET SCREE	N WAKE-UP	
	GET BACKL	IGHT TIMER	
	SET TIM	MEZONE	
	SET POLL	INTERVAL	
	GET TIN	MEZONE	
	GET POLL	INTERVAL	
	SET DA	TETIME	
M ENABLE AUTO DATE TIM	E Use 24-hour format 🗍	Þ	
	SET PAS	SSWORD	
PLAYPROTECT		GET PLAY	PROTECT
SET [)PI	160	*
	GET	° DPI	
SET WIFI MAG	CADDRESS	Use randomized MAC	*
	GET WIFI M	AC ADDRESS	
Output :			
TOKEN VERIFIED			
EXIT APPLICATION	CLEA	AR OUTPUT	MAIN MENU

2.2 ナビゲーションバーを隠す方法2(初期設定時)

- まず、デバイスの OS ビルドが最新であることを確認します。
 備考)古い場合、以下のギアマークが表示されません。
- 以下の初期設定画面右上の、ギアマークをタップします。
 備考)メニュー画面は、横長になる場合もあります。

	\$
Thank you for pure c Please select a s	chasing an Elo M50 mobile omputer! et-up option to proceed:
	Enroll with EloView
	Enroll with GMS
	Android Home Mode

- 3) 表示される「Settings」メニュー内の「Pre-Stage Config」をタップします。
- 4) 「Pre-Stage Config」メニューが表示されることを確認します。
- 5) USB 経由での設定(「Import from USB」)
- a) FAT32 で、フォーマットされた USB ドライブのルートディレクトリに"Prestage"フォルダを作成し、「Prestage.zip」を解凍したファイルを保存します。
- b) USB ドライブをデバイスに接続します。
- c) 「Pre-Stage Config」メニューの「Import from USB」をタップします。
- d) 終了後、リブート(元電源をオフ、再度オン)し、「Enroll with GMS」あるいは「Android Home Mode」で セットアップして終了します。

2.3 ナビゲーションバーを再度表示する方法

1) Android Home 画面から、「EloViewHomeSDKTestApp」を起動します。



2) ELOVIEW HOME SDK MAIN MENU 画面から「SYSTEM」をタップします。 226 ■ ✿ 习

ELOVIEW HOME SDK MAIN MENU	SDK Version: 5.10.
ОТА	
PACKAGE	
NETWORK	
SYSTEM	
MEMORY	
INFO	
PERIPHERALS	
EXIT APPLICATION	

 SYSTEM API」画面で、赤く表示されている「ACCOUNT MANAGER」をタップし、「ACCOUNT MANAGER API」画面が起動することを確認します。
 227 ■ 4 3

SYSTEM API				
ACCOUNT MANAGER				
CAPTURE SCREENSHOT				
SET ORIENTATION				
GET ORIENTATION				
FACTORY RESET				
SILENT REBOOT				
SILENT SHUTDOWN				
SET RESERVED LOG SPACE				
GET RESERVED LOG SPACE				
ENABLE HOME BUTTON				
DISABLE HOME BUTTON				
ENABLE TOUCH SOUND				
DISABLE TOUCH SOUND				
ENABLE POWER BUTTON				
DISABLE POWER BUTTON				
NETWORK CONFIGURATION				
CLEAR APP CACHE AND USERDATA				
CLEAR ALL APP CACHE AND USERDATA				
SILENT SET DEFAULT LAUNCHER				
SET NAVIGATION BAR				
SET STATUS BAR				
SET STATUS BAR VISIBLE				

 「LOAD AND VERIFY TOKEN」をタップし、「MAIN MENU」をタップし、「SYSTEM API」画面で「ACCOUNT MANAGER」が緑色表示されていることを確認します。
 備考) 左下の OUTPUT の下に 「TOKEN VERIFIED」が表示される場合があります。

2:27 🖪 🏟 🗘 🦙			$\leftrightarrow \bigtriangledown$		
	ACCOUNT MA	NAGER API			
	Enter email Id				
	Enter Password				
	GET TOKEN	VERIFY TOKEN			
	OR			2:28	8 ¢ Q %
	Enter Client Id				
	Enter Secret Key				
	GET AND VERI	FY TOKEN			
	OR				
Output :	Load a file containing the	IFY TOKEN			
TOKEN VERIFIED					
EXIT APPLICATION	CLEAR OUT	ТРИТ	MAIN MENU		

 4) SYSTEM API 画面を下に、「SET NAVIGATION BAR」が見えるまで、スクロールし、右下の「Enable」を選択後、 「SET NAVIGATION BAR」をタップします。
 2:30 ■ ◆ ○ う

:30 🖪 🌣 😏 🖘			$\leftrightarrow \heartsuit$		
	SYST	EM API			
	NETWORK C	ONFIGURATION			
	CLEAR APP CAC	HE AND USERDATA			
	CLEAR ALL APP CA	ACHE AND USERDATA			
	SILENT SET DE	FAULT LAUNCHER			
SET N/	VIGATION BAR				
SET	STATUS BAR				
SET STA	TUS BAR VISIBLE				
GRANT AUTO	ALL APP PERMISSIONS	🖲 Enable	\bigcirc Disable		
GRANT AUT	O USB PERMISSION				
ENABLE SHA	RE TEXT SELECTION				
AUTOM	ATIC IDLE MODE				
GET NAVIGATION BA	GET STATUS BAR	GET GRANT AUTO ALL APP PERMISSION	GET GRANT AUTO USB PERMISSION		
SET BA	CKLIGHT TIMER	Never	*		
	SET SCRE	EN WAKE-UP			
	GET BACK	LIGHT TIMER			
	SET T	IMEZONE			
	SET POL				
	GET T	IMEZONE			
	GET POL	L INTERVAL			
	SET D	ATE TIME			
-	1. (4)	-			

) 画面下のナビク 30 ■ ⇔ © 🤉	ゲーションバーた	が表示されている	ことを確認し、終了で [・] ↔ ♡		
	SYST	EM API			
	NETWORK C	ONFIGURATION			
	CLEAR APP CAC	HE AND USERDATA			
	CLEAR ALL APP CA	CHE AND USERDATA			
	SILENT SET DE	FAULT LAUNCHER			
SET NAVIGA	ATION BAR				
SET STAT	US BAR				
SET STATUS	BAR VISIBLE	Enable O Disable			
GRANT AUTO ALL A	APP PERMISSIONS				
GRANT AUTO US	B PERMISSION				
ENABLE SHARE T	EXT SELECTION				
AUTOMATIC	IDLE MODE				
GET NAVIGATION BAR	GET STATUS BAR	GET GRANT AUTO ALL APP PERMISSION	GET GRANT AUTO USB PERMISSION		
SET BACKLI	GHT TIMER	Never	•		
	SET SCRE	EN WAKE-UP			
	GET BACK	LIGHT TIMER			
	SET TI	MEZONE			
	SET POL				
_	JET TOL				
	GET TI	MEZONE			
	GET POLI	LINTERVAL			
	SET D/	ATE TIME			
-					
		•			

- 3. Android Home モードで APK アプリをインストールする手順
- 1) 電源を入れて、下図の画面が表示されたら、「Setup offline」をタッチします。

Select a network	
₹.	
₹.	
•	
₹i	
*	

4

2) 確認画面が表示されるので、「CONTINUE」をタッチします。

Set up offline? Connecting to a Wi-Fi or mobile network helps you quickly set up your device. Without a connection, you can't: • Sign in to your Google Account
Connecting to a Wi-Fi or mobile network nelps you quickly set up your device. Without a connection, you can't: • Sign in to your Google Account
Without a connection, you can't: • Sign in to your Google Account
Sign in to your Google Account
Restore apps & data
Get software updates
Automatically set up time and date
BACK CONTINUE
elo_secure

 \Diamond

Thank you for purchasing an Elo 10" I-Series computer! Please select a set-up option to proceed:



4) 確認のメッセージが表示されるので「Ok」をタッチします。



5) Android Home 画面が開きます。

4:01 🌣 🖸 🖙 ψ					<
			Tuesday, Dec 5		
-					
	Gast	Photos	Elo Test Apps		Play Store
	-		?	0	
G					Ļ

- 6) インストールしたい APK ファイルを保存した USB メモリを本体に接続します。
- 7) 画面を下から上にスワイプすると、インストールされているアプリケーションのアイコンが表示されます。
 Files アイコンをタッチして開きます。
 404 ◆ ③ ◆ ・



8) 左下に、接続した USB メモリが表示されていると思います。USB メモリをタッチして、ファイル一覧を表示します。

4:07	¢0 👳 🕂 🔸						\bigtriangledown
BU	FFALO USB drive					Q	:
Q	Recent	BUFFALO USB drive					
	Images	Images 🖸 Audio	Videos 🤇	Large files (5) Th	is week		
	Videos	FILES ON BUFFALO USB DRIVE					
Ø	Audio	L		LUGI.DIN			
+	Downloads			рислидс_со			
	10in-I-Series-4 47.02 GB free						
ψ	BUFFALO USB	ED	2				
		720P_PORTR 2.76 MB May 1	elo-i-series-4 1.67 GB May 25				
			•	•			

9) インストールしたい APK ファイルをタッチします。

Elo	ViewApp		Q	:
0	Recent	BUFFALO USB drive > EloViewApp		
-	Images	Images 🕜 Audio 🔛 Videos 🚫 Large files 🕢 This week		
	Videos	FILES IN ELOVIEWAPP		
ß	Audio			
<u>+</u>	Downloads			
	10in-I-Series-4 47.02 GB free	EloDrawpAnd		
ψ	BUFFALO USB 2.08 GB free			
		4 0 H		

 \Diamond

10) 確認のメッセージが表示されるので、「CONTINUE」をタッチします。



11) 「INSTALL」をタッチして、インストールを行います。

4:14 1	\$ 0 🦷 🕈 •			\diamond
Elo	ViewApp		Q	i.
O	Recent	BUFFALO USB drive > EleViewApp		
	Images	💽 Images 💽 Audio 🔛 Videos 🚫 Large files 🚯 This week		
	Videos	FILES IN ELOVIEWAPP		
0	Audio			
<u>*</u>	Downloads	EloDrawAndroid		
٥	10in-I-Series-4 47.02 GB fme	EloDn CANCEL INSTALL		
φ	BUFFALO USB_ 2 08 GB firm			
		↓ ● ■		

12) 「OPEN」をタッチすると、インストールしたアプリケーションが開きます。

EloViewApp	۹ :
S Recent BUFFALO USB drive > EloViewApp	
📰 Images 💽 Audio 🔛 Videos 🚫 Large files 🕢 This week	
FILES IN ELOVIEWAPP Videos	E
Audio	
Downloads Downloads Downloads Downloads	
DONE OPEN	
Ф BUFFALD USB_ ▲	
∢ ● ■	

13) アプリケーションの画面が表示されます。



以上